



# PlayStation One Mother Board Replacement

This will guide you in replacing the Mother board of a PlayStation One.

Written By: trickster



## INTRODUCTION

 
This will guide you in replacing the Mother board of a PlayStation One.

## Step 1 — Upper Case



- Remove all cables plugged into the PlayStation.

## Step 2

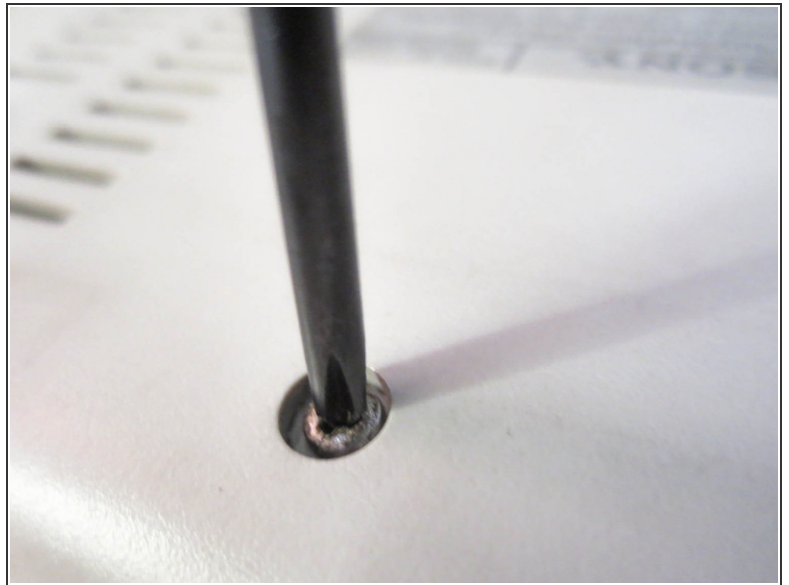

- Flip over the PlayStation and remove the six screws from the bottom.

## Step 3



- Flip the PlayStation back.

⚠ There are no screws holding EVERYTHING inside the PlayStation so better hold it like a burger while flipping.

 
## Step 4



- Lift up and remove the upper case.



## Step 5 — Lens

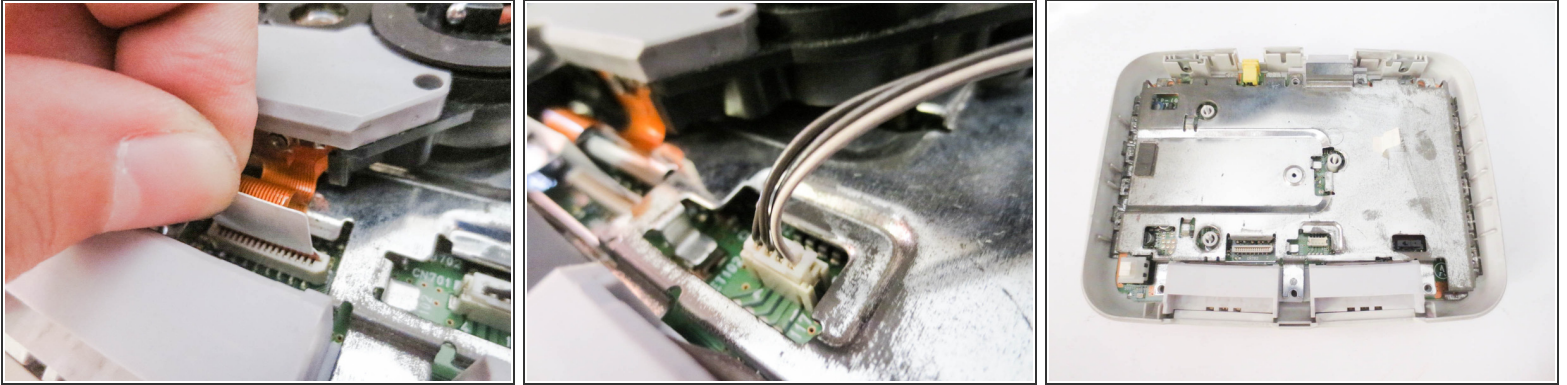


- Disconnect the ribbon cable and wired cable connectors.
- Take extreme care when disconnecting ribbon cable from motherboard. Tears extremely easy.

## Step 6 — Mother Board



 - remove the metal plate

## Step 7

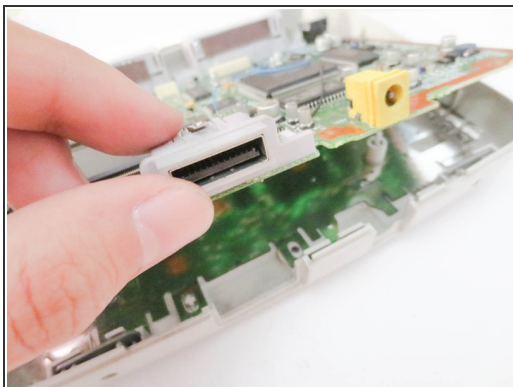

- remove the mother board by lifting the back.

**i** if you're having a hard time removing it, use your nail and lift the second controller port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 06:39:44 PM.